

M7D77-PTZV20X-WPSAA COMMAND SHEET

FEATURES	DESCRIPTION	COMMAND	RECALL	PRESET
Call infrared auto mode	Automatically controlled and adjusted by external light	81	√	
Call night vision mode (black and white)	Infrared light forced on	82	√	
Call daylight color mode	Infrared light forced off	83	√	
Call to enable first cruise	Start cruise 1 (1-5)	98	√	
Call to enable second cruise	Start cruise 2 (6-15)	97	√	
Call to enable third cruise	Start cruise 3 (16-30)	96	√	
Set to increase cruise staying time	PRESET to increase the cruise staying time by 1 second (default 5s, maximum 100s)	123		√
Set to reduce cruise staying time	PRESET to decrease the cruise staying time by 1 second (default 5s, minimum 3s)	124		√
Set the line scan[1] left boundary	PRESET the left spot boundary [1]	81		√
Set the line scan[1] right boundary	PRESET the Right spot boundary [1]	82		√
Set the line scan[2] left boundary	PRESET the left spot boundary [2]	83		√
Set the line scan[2] right boundary	PRESET the right spot boundary [2]	84		√
Set the line scan[3] left boundary	PRESET the left spot boundary [3]	85		√
Set the line scan[3] right boundary	PRESET the right spot boundary [3]	86		√
Call to start line scan [1]	RECALL to enable line scan [1]	141	√	
Call to start line scan [2]	RECALL to enable line scan [2]	142	√	
Call to start line scan [3]	RECALL to enable line scan [3]	143	√	
Set to increase line scan speed	PRESET to increase line scan speed by 1 (default 5, maximum 20)	128	√	
Set to decrease line scan speed	PRESET to decrease line scan speed by 1 (default 5, minimum 1)	129	√	
Call to turn on 360-degree panoramic cruise scans	PRESET to enable panoramic cruise scan	120	√	
Set to turn on the guard spot	Set the current position as the guard position and enable the guard position feature (PRESET 125 [the spot] is the guard position). The default staying time is 5 minutes to allow the dome camera return	125		√

M7D77-PTZV20X-WPSAA COMMAND SHEET

Call to clear guard spot	to the guide spot. After the gimbal is not in operation, it will automatically return to the guard position after [guard staying time (default time is 5 minutes)]	125	√	
Call to increase guard staying time	PRESET to increase guard staying time (adjust once to plus 1 minute, maximum 10 minutes)	126	√	
Call to decrease guard staying time	PRESET to reduce guard staying time (adjust once to minus 1 minute, minimum 1 minute)	127	√	
Call PTZ movement lock off		130	√	
Call PTZ movement lock on	Before calling cruise, line scan, 360-degree panorama scan, and pattern scanning, RECALL 131 to set the PTZ movement lock on (default is off). If the PTZ movement lock is turned on, the dome camera will return to previous controlling status after the user stops controlling the dome camera. To unlock the PTZ movement lock, RECALL 130. The staying time is 5 minutes.	131	√	
Call to horizontal and vertical gimbal correction	Horizontal and vertical gimbal correction Verify the function of the gimbal	107	√	
Call to restore PTZ board factory settings	Call to restore PTZ board factory settings	106	√	
Call to flip upside down and from left to right control direction	Flip vertical + flip horizontal control direction	86	√	
Call to flip upside down control direction	Flip vertical control direction	87	√	