

M7D77-PTZV20XS-WPSAA COMMAND SHEET

FEATURES	CONTROL METHOD	NOTES
Call to enable the first cruise line (1-30 preset positions)	RECALL 98	
Call to enable the second cruise line (31-60 preset positions)	RECALL 97	
Call to enable the third cruise line (16-30 preset position)	RECALL 96	
Set the line scan [1] left boundary	PRESET 81	
Set the line scan [1] right boundary	PRESET 82	
Set the line scan [2] left boundary	PRESET 83	
Set the line scan [2] right boundary	PRESET 84	
Set the line scan [3] left boundary	PRESET 85	
Set the line scan [3] right boundary	PRESET 86	
Call to start line scan [1]	RECALL 141	
Call to start line scan [2]	RECALL 142	
Call to start line scan [3]	RECALL 143	
Call to start horizontal 360 ° scan	RECALL 99/120	
Set infrared lamp sensitivity setting (photosensitive activation threshold)	PRESET 110+ PRESET N (N is 36-100)	The smaller the value, the more sensitive
Set line scan and 360° scan speed	PRESET 111 + PRESET N (N is 1-64)	
Set a cruise staying time	PRESET 114 + PRESET N (N is 1-255 seconds)	4 seconds by default
Set cruise speed	PRESET 115 + PRESET N (N is 1-64)	Default 64
Set the staying time before return to the guard spot	PRESET 116 + PRESET N (N is 1-255 seconds)	90 seconds by default
Set the staying time before resuming the ptz movement, when PTZ movement lock is ON	PRESET 117 + PRESET N (N is 1-255 seconds)	180 seconds by default
Set the guard spot / call to clear the guard spot	PRESET 125 to set guard position RECALL 125 to clear guard position	
Call infrared auto mode	RECALL 81	
Call infrared light forced on (night vision black and white)	RECALL 82	
Call infrared light forced off (daylight color mode)	RECALL 83	
Call infrared light mode 1: switch between near and far lights	RECALL 84	

M7D77-PTZV20XS-WPSAA COMMAND SHEET

Call infrared light mode 2: far lights on	RECALL 85	
Call infrared light mode 3: near and far lights on	RECALL 86	
Call to clear all presets	RECALL 104	
Call initialization reset (restore factory settings)	RECALL 106	
Call PTZ recalibration	RECALL 107	
[Call/Set] speed changes when zoom changing: On / Off	RECALL 108 is [ON]; PRESET 108 is [OFF]	[OFF] by default
[Call/Set] PTZ movement lock: On/Off	RECALL 105 [ON] PRESET 105 [OFF]	[OFF] by default
Call dome camera rotation mode: forward	RECALL 246 + RECALL 119	
Call dome camera rotation mode: reverse	RECALL 246 + RECALL 120	Default